



INSTALLATION GUIDE FOR DOOR FRAMES

... after all doors are a sneak peak of the beautiful inside.

Certifications:



PACKING LIST OF PAAM DOOR FRAME



**DOOR FRAME
IN 3 PARTS MARKED A,B & C**



WOODEN BEIDING



NAILS

TOOLS REQUIRED TO ASSEMBLE PAAM DOOR FRAMES



HAMMER



GRINDING MACHINE



L- SCALE



GLUE



PUT TOGETHER ALL THE PIECES OF THE DOOR FRAME. PAAM DOOR FRAMES ARE MARKED WITH RESPECTIVE SIZES AND CODED A,B & C FOR EASY IDENTIFICATION



APPLY GLUE ON THE SLANT EDGES OF THE DOOR FRAMES



PLACE THE THREE PIECES OF DOOR FRAME AT THEIR RESPECTIVE POSITIONS



**BRING TOGETHER THE EDGES OF THE DOOR FRAMES SO AS TO NOT LEAVE ANY GAP.
THIS CAN BE DONE WITH THE HELP OF THE HAMMER.**



**BRING TOGETHER THE EDGES OF THE DOOR FRAMES SO AS TO NOT LEAVE ANY GAP
THIS CAN BE DONE WITH THE HELP OF THE HAMMER.**



GRIND THE JOINT SO AS TO PHASE OUT ANY UNEVENNESS




FILL THE JOINTS WITH A PASTE OF MESHED SAW DUST AND GLUE AND THEN PAINT IT



MEASURE THE EDGES WITH THE HELP OF A L- SCALE TO ENSURE THAT THE FRAME IS AT ACCURATE RIGHT ANGLE AND THEN NAIL A BEIDING TO KEEP IT INTACT



MEASURE AND NAIL TWO BEIDINGS ON THE DOOR FRAME SO AS TO KEEP IT INTACT

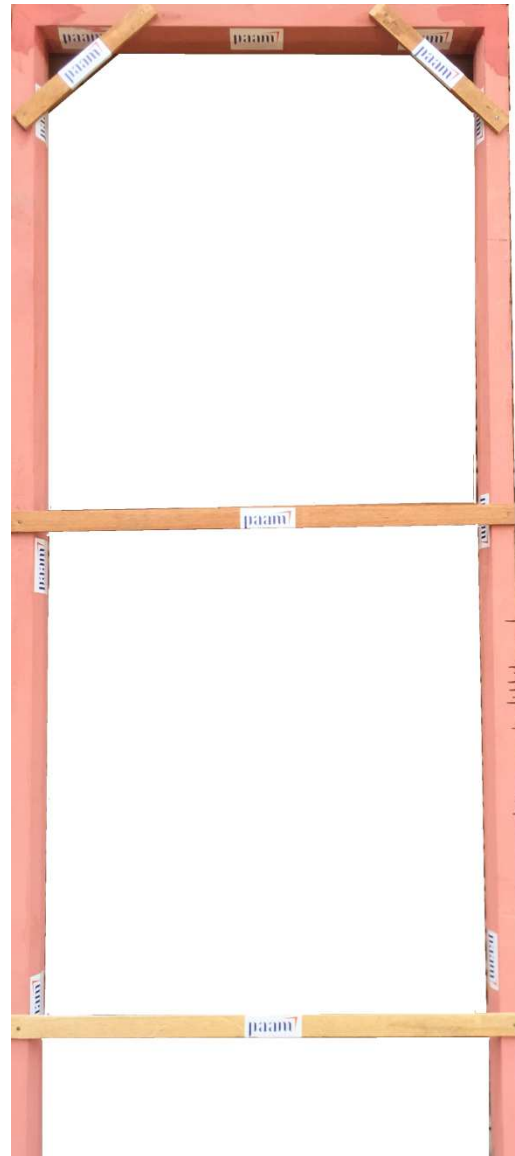

YOUR DOOR FRAME IS READY FOR INSTALLATION

Thank You



For any further assistance please contact us on:

Tel : +91- 40 – 24615104/ 24615182/ 66569082

Mobile :+91- 9885758588/ 9581804000

www.paamgroup.com | info@paamgroup.com

